



## Hardware Reference Guide

HP ProOne 600 G3 21 inch All-in-One Business PC  
HP ProOne 400 G3 20 inch All-in-One Business PC

© Copyright 2017 HP Development Company, L.P.

Windows is either a trademark or registered trademark of Microsoft Corporation in the United States and/or other countries.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

This document contains proprietary information that is protected by copyright. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of HP Development Company.

First Edition: June 2017

913340-001

## About This Book

This guide provides basic information for upgrading this computer model.

---

 **WARNING!** Text set off in this manner indicates that failure to follow directions could result in bodily harm or loss of life.

 **CAUTION:** Text set off in this manner indicates that failure to follow directions could result in damage to equipment or loss of information.

 **NOTE:** Text set off in this manner provides important supplemental information.

---



---

# Table of contents

<b>1 Product features</b>	<b>1</b>
Overview	1
ProOne 600 Components	2
Front components	2
Side components	3
Rear components	4
ProOne 400 Components	5
Front components	5
Side components	6
Rear components	7
Keyboard features	8
Labels	9
<b>2 Setup</b>	<b>10</b>
Overview	10
Attaching and removing a stand	11
Attaching and removing an easel stand	11
Attaching an easel stand	11
Removing an easel stand	12
Attaching and removing an adjustable height stand	13
Attaching an adjustable height stand	13
Removing an adjustable height stand	14
Attaching the computer to a mounting fixture	15
Connecting and disconnecting cables	16
Connecting cables	16
Connecting a display	16
Disconnecting cables	17
Removing and installing the rear port cover	17
Removing the rear port cover	17
Installing the rear port cover	18
Positioning the computer	19
Adjusting an easel stand	19
Adjusting an adjustable height stand	20
Installing a security cable	21
Connecting and disconnecting power	22
Connecting power	22

Disconnecting power .....	22
Webcam .....	23
Webcam operation .....	23
Setting up Windows Hello .....	24
Synchronizing the optional wireless keyboard and mouse .....	24
<b>3 Hardware repair and upgrade .....</b>	<b>26</b>
Warnings and cautions .....	26
Additional information .....	26
Removing batteries from the optional wireless keyboard or mouse .....	27
Removing and replacing the computer access panel .....	28
Removing the computer access panel .....	28
Replacing the computer access panel .....	29
Locating internal components .....	30
Removing and installing memory .....	30
Memory module specifications .....	30
Populating memory module slots .....	31
Installing memory modules .....	32
Replacing the RTC Battery .....	35
Replacing drives .....	38
Replacing a hard drive .....	38
Removing a hard drive .....	38
Installing a 2.5 inch hard disk drive .....	40
Replacing the optical disc drive .....	41
<b>Appendix A Electrostatic discharge .....</b>	<b>43</b>
Preventing electrostatic damage .....	43
Grounding methods .....	43
<b>Appendix B Computer operating guidelines, routine care, and shipping preparation .....</b>	<b>44</b>
Computer operating guidelines and routine care .....	44
Optical disc drive precautions .....	45
Shipping preparation .....	45
<b>Appendix C Accessibility .....</b>	<b>46</b>
Supported assistive technologies .....	46
Contacting support .....	46
<b>Index .....</b>	<b>47</b>

---

# 1 Product features

## Overview



---

 **NOTE:** For the latest manuals on this product, go to <http://www.hp.com/support>. Select **Find your product**, and then follow the on-screen instructions.

---


# ProOne 600 Components

## Front components




Component		Component	
1	Webcam microphone	4	Webcam lens
2	Webcam LED	5	Speakers
3	Webcam shutter		

## Side components

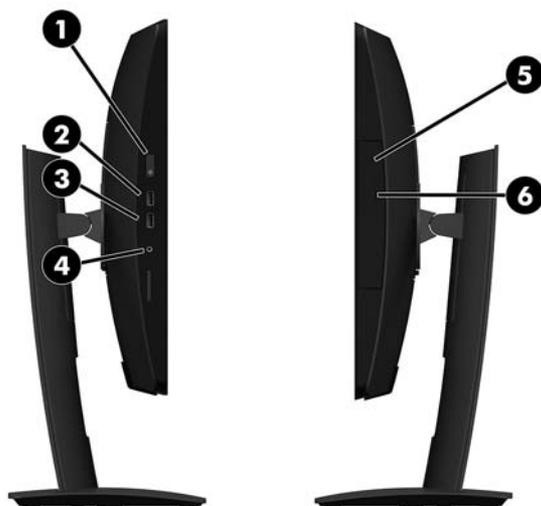

Component		Component	
1	Power button	4	Headset jack
2	USB Type-A charging ports (2)	5	Optical disc drive
3	USB Type-A ports (2)	6	Optical disc drive eject button

## Rear components

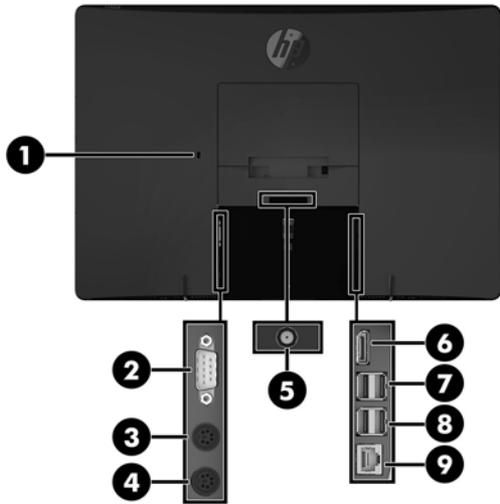

Component		Component	
1	Security cable slot	6	DisplayPort port
2	Serial port	7	USB Type-A charging ports (2)
3	PS/2 keyboard connector	8	USB Type-A ports (2)
4	PS/2 mouse connector	9	RJ-45 (network) jack
5	Power connector		


# ProOne 400 Components

## Front components




Component	Component
1 Webcam microphone	3 Webcam lens
2 Webcam LED	4 Speakers

## Side components

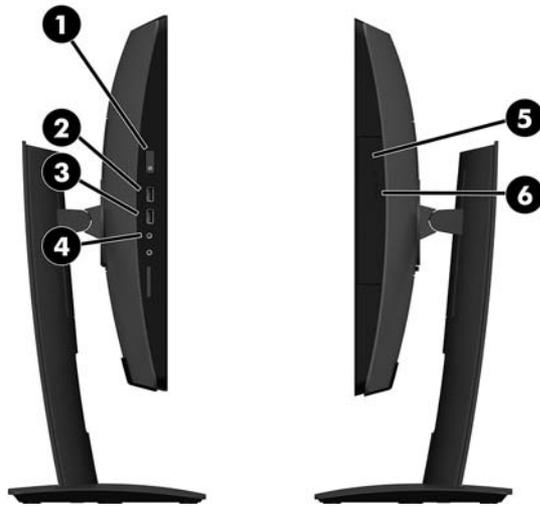

Component		Component	
1	Power button	4	Headset jack
2	USB Type-A charging ports (2)	5	Optical disc drive
3	USB Type-A ports (2)	6	Optical disc drive eject button


## Rear components

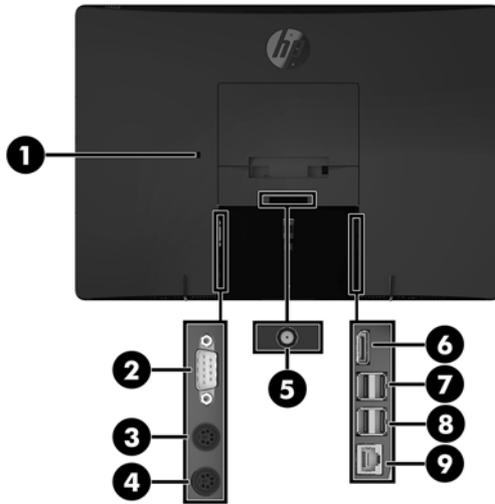

Component	Component
1 Security cable slot	6 DisplayPort port
2 Serial port	7 USB Type-A charging ports (2)
3 PS/2 keyboard connector	8 USB Type-A ports (2)
4 PS/2 mouse connector	9 RJ-45 (network) jack
5 Power connector	

# Keyboard features

Your keyboard and mouse may be different.

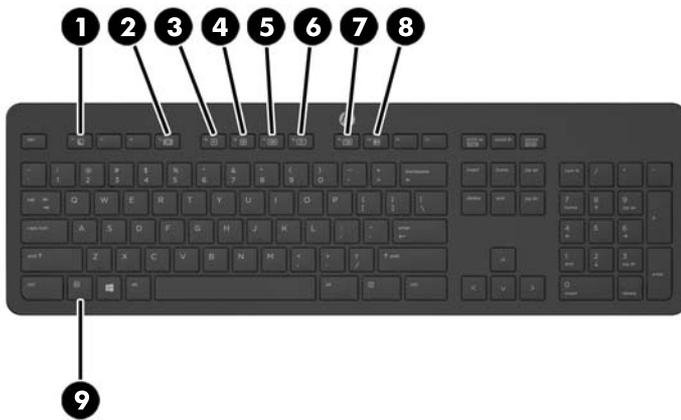

Component		Component	
1	Sleep	6	Mute Volume
2	Fast Reverse	7	Decrease Volume
3	Play/Pause	8	Increase Volume
4	Stop	9	Function
5	Fast Forward		

# Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

 **IMPORTANT:** All labels described in this section will be located under the stand or affixed to the bottom of the computer.

1. Microsoft® Certificate of Authenticity label (select models only prior to Windows 8)—Contains the Windows Product Key. You may need the Product Key to update or troubleshoot the operating system. HP platforms preinstalled with Windows 8 or Windows 8.1 do not have the physical label, but have a Digital Product Key electronically installed.

 **NOTE:** This Digital Product Key is automatically recognized and activated by Microsoft Operating Systems on a reinstall of the Windows 8 or Windows 8.1 operating system with HP-approved recovery methods.

2. Service label—Provides important information to identify your computer. When contacting support, you will probably be asked for the serial number, and possibly for the product number or the model number. Locate these numbers before you contact support.




---

### Component

---

- (1) Serial number
  - (2) Product number
  - (3) Warranty period
- 

3. Serial number label

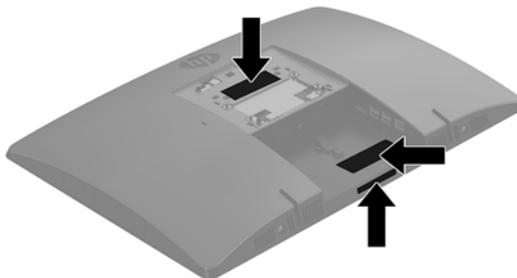

---

## 2 Setup

### Overview

Set up the computer in the following order:

- Attach a stand. See [Attaching and removing a stand on page 11](#).

Or

Attach the computer to a mounting fixture. See [Attaching the computer to a mounting fixture on page 15](#).

- Connect the cables for peripherals and power. See [Connecting and disconnecting cables on page 16](#).
- Connect an additional display, if desired. See [Connecting a display on page 16](#).
- Install and secure the rear port cover. See [Installing the rear port cover on page 18](#).
- Select a comfortable computer position and viewing angle. See [Positioning the computer on page 19](#).
- Install a security cable for security. See [Installing a security cable on page 21](#).
- Turn on the power. See [Connecting power on page 22](#).
- The mouse and keyboard are synchronized at the factory. Should you ever need to synchronize the mouse and keyboard again, see [Synchronizing the optional wireless keyboard and mouse on page 24](#).

## Attaching and removing a stand

Two stands are available for the computer:

- [Attaching and removing an easel stand](#)
- [Attaching and removing an adjustable height stand](#)

### Attaching and removing an easel stand

#### Attaching an easel stand

To install the stand:

1. Place the computer face down on a soft flat surface. HP recommends that you set down a blanket, towel, or other soft cloth to protect the bezel and screen surface from scratches or other damage.
2. Engage the hooks in the top of the stand in the two large holes in the upper part of the back of the computer (1).
3. Rotate the stand down until it clicks into place (2).



## Removing an easel stand

To remove the stand:

1. Remove all removable media, such as optical discs or USB flash drives, from the computer.
2. Turn off the computer properly through the operating system, then turn off any external devices.
3. Disconnect the AC power cord from the AC outlet and disconnect any external devices.
4. Place the computer face down on a soft flat surface. HP recommends that you set down a blanket, towel, or other soft cloth to protect the bezel and screen surface from scratches or other damage.
5. Remove the rear port cover, if it is installed. For instructions, see [Removing the rear port cover on page 17](#).
6. Press the release latch under the stand (1).
7. Lift the stand up (2), and then pull the stand hooks out of the computer (3).



## Attaching and removing an adjustable height stand

### Attaching an adjustable height stand

To install the stand:

1. Place the computer face down on a soft flat surface. HP recommends that you set down a blanket, towel, or other soft cloth to protect the bezel and screen surface from scratches or other damage.
2. Engage the hooks in the top of the stand in the two large holes in the upper part of the back of the computer (1).
3. Rotate the stand down until it clicks into place (2).



## Removing an adjustable height stand

To remove the stand:

1. Remove all removable media, such as optical discs or USB flash drives, from the computer.
2. Turn off the computer properly through the operating system, then turn off any external devices.
3. Disconnect the AC power cord from the AC outlet and disconnect any external devices.
4. Place the computer face down on a soft flat surface. HP recommends that you set down a blanket, towel, or other soft cloth to protect the bezel and screen surface from scratches or other damage.
5. Remove the rear port cover, if it is installed. For instructions, see [Removing the rear port cover on page 17](#).
6. Press the release latch under the stand (1).
7. Lift the stand up (2), and then pull the stand hooks out of the computer (3).



## Attaching the computer to a mounting fixture

The computer can be attached to a wall, swing arm, or other mounting fixture.

 **NOTE:** This apparatus is intended to be supported by UL or CSA Listed wall mount bracket.

---



1. Press the supplied VESA trim plate onto the VESA opening until it snaps into place.



2. To attach the computer to a swing arm (sold separately), insert the four 20 mm screws that are supplied with the computer through the holes on the swing arm plate and into the mounting holes on the computer.

 **CAUTION:** This computer supports the VESA industry standard 100 mm mounting holes. To attach a third-party mounting solution to the computer, four 4 mm, 0.7 pitch, and 20 mm long screws are required. These screws are supplied with the computer. Longer screws must not be used because they may damage the computer. It is important to verify that the manufacturer's mounting solution is compliant with the VESA standard and is rated to support the weight of the computer. For best performance, it is important to use the power and other cables provided with the computer.

---

To attach the computer to other mounting fixtures, follow the instructions included with the mounting fixture to ensure that the computer is safely attached.

# Connecting and disconnecting cables

## Connecting cables

1. Place the computer face down on a soft flat surface. HP recommends that you set down a blanket, towel, or other soft cloth to protect the bezel and screen surface from scratches or other damage.
2. If the rear port cover is installed, remove the cover.
3. Route the power and all peripheral cables through the opening in the base of the stand.



4. Connect the peripheral cables to the appropriate ports.
5. Connect the power cord to the power connector on the rear of the computer.

## Connecting a display

The ports on the rear of the computer allow you to connect up to two displays to the computer.

If you are adding a display that has a DisplayPort port, then no video adapter is required. If you are adding a display that does not have a DisplayPort port, you can purchase a video adaptor from HP for your configuration.

DisplayPort adapters and video cables are purchased separately. HP offers the following adapters:

- DisplayPort to VGA adapter
- DisplayPort to DVI adapter

To connect a display:

1. Turn off power to the computer and to the display that you are connecting to the computer.
2. Remove the rear port cover on the computer.
3. If your display has a DisplayPort connector, connect a DisplayPort cable directly between the DisplayPort connector on the rear of the computer and the DisplayPort connector on the display.
4. If your display does not have a DisplayPort connector, connect a DisplayPort video adapter to the DisplayPort connector of the computer. Then connect a cable (VGA or DVI, depending on your application) between the adapter and a display.

5. Replace the rear port cover on the computer.
6. Turn on power to the computer and the display.

 **NOTE:** Use the graphics card software or the Windows Display Settings to configure the display as a mirrored image of the computer display or an extension of the computer display.

## Disconnecting cables

1. You may need to remove the security cable, if one is installed on the rear of the computer.
2. Place the computer face down on a soft flat surface. HP recommends that you set down a blanket, towel, or other soft cloth to protect the bezel and screen surface from scratches or other damage.
3. If the rear port cover is installed, remove the cover.
4. Disconnect the cables from the ports.

## Removing and installing the rear port cover

### Removing the rear port cover

1. Place the computer face down on a soft flat surface. HP recommends that you set down a blanket, towel, or other soft cloth to protect the bezel and screen surface from scratches or other damage.
2. If the security lock screw is secured, unscrew it with a T15 tamper-resistant Torx security screwdriver.




3. Slide the rear port cover retainer tabs toward each other (1) to release the port cover.
4. Pull the port cover (2) toward the bottom and off the computer.



## Installing the rear port cover

1. Be sure that all cables are connected.
2. Hold the port cover parallel to the computer and align the two tabs on the port cover with the slots in the top of the rear port compartment.
3. Slide the port cover (1) in until the tabs click into place.
4. Slide the rear port cover retainer tabs away from each other (2) to lock the port cover in place.

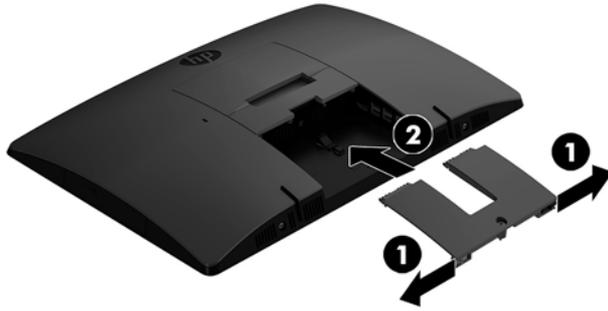

5. You may prevent access to internal components and ports by securing the rear port cover. Use a T15 tamper-resistant Torx screwdriver to screw the captive screw into the chassis.



## Positioning the computer

This computer may ship with a recline stand or an adjustable height stand.

- [Adjusting an easel stand](#)
- [Adjusting an adjustable height stand](#)

### Adjusting an easel stand

**⚠ CAUTION:** Use caution when reclining a computer if a cable lock is installed. The cable or the lock may interfere with the rotation or the angle of recline.


This stand allows you to position the computer from a reclining position to an upright position.

To adjust the computer position from the reclining position to an upright position:

1. Grasp both top and bottom of the computer and lift the computer to the highest point.
2. Press the bottom of the computer down and adjust to the appropriate tilt.

To adjust the computer position from an upright position to the reclining position:

1. Lift the bottom of the computer until it is level with the top.
2. Grasp both top and bottom of the computer and press down until the computer is in the desired position.

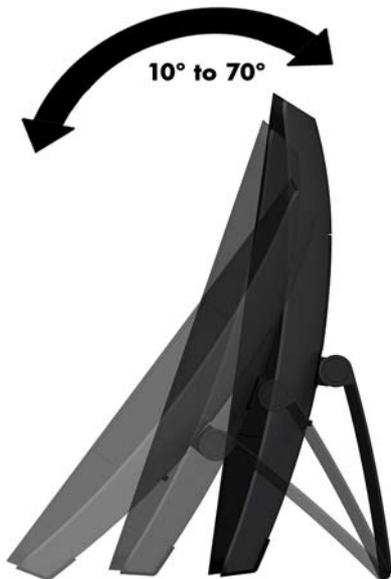

## Adjusting an adjustable height stand

**⚠ CAUTION:** Use caution when rotating or reclining a computer if a cable lock is installed. The cable or the lock may interfere with the rotation or the angle of recline.


This stand allows you to:

- Tilt the computer from  $-5^{\circ}$  to  $20^{\circ}$  from the desktop
- Adjust the computer height within a range of 110 mm (4.3 in)
- Rotate the computer from the landscape to portrait view
- Swivel the computer up to  $45^{\circ}$  to either side




To tilt the computer, grasp the top and bottom of the computer and adjust to the appropriate tilt.

To change the height of the computer, grasp both sides of the computer and lift or lower to the appropriate height.

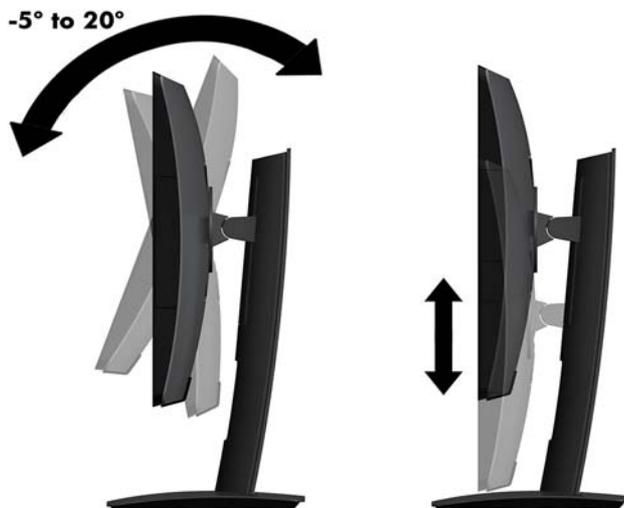

## Installing a security cable

A security cable is a key lock device that has a wire cable attached. You attach one end of the cable to your desk (or other stationary object) and the other end of the cable to the security cable slot on the computer. Secure the security cable lock with the key.

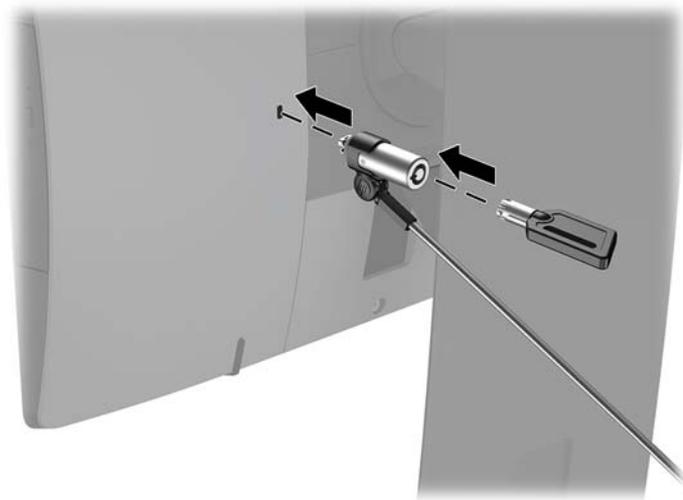

---


**⚠ CAUTION:** Use caution when adjusting the tilt, swivel, or height of the computer if a security cable is installed. The cable or the lock may interfere with the adjustment.

---


# Connecting and disconnecting power

## Connecting power

1. Connect the computer to a power source.
  - If your computer model is a ProOne 600, connect one end of the power cord to a grounded AC outlet (1) and the other end to the computer (2).

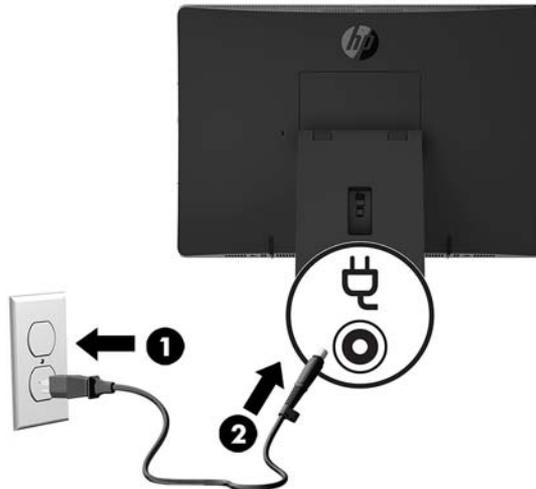

- Connect one end of the power cord to the AC adapter (1) and the other end to a grounded AC outlet (2), and then connect the AC adapter to the computer (3).

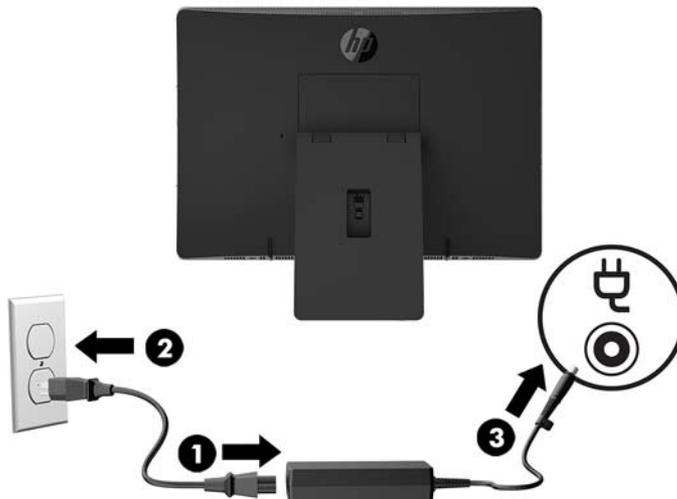

2. Press the power button on the side of the computer to turn it on.

## Disconnecting power

1. Remove all removable media, such as optical discs or USB flash drives, from the computer.
2. Turn off the computer properly through the operating system, then turn off any external devices.
3. Disconnect the power cord from the AC outlet and disconnect any external devices.

## Webcam

With Skype for Business installed on your external source device, you can use the webcam on the monitor in the following ways:

- Stream online video conferences
- Send and receive Instant messages
- Schedule meetings
- Maintain security over conversations

### Webcam operation

- ▲ Slide the webcam shutter to the left to open the webcam.
- ▲ Slide the webcam shutter to the right to close the webcam.

## Setting up Windows Hello


If the Windows 10 operating system is installed on your computer, follow these steps to set up Windows Hello facial recognition:

1. Select the **Start** button, select **Settings**, select **Accounts**, and then select **Sign-in options**.
2. Under **Windows Hello**, follow the on-screen instructions to add both a password and a 4-digit PIN. Then enroll your fingerprint or facial ID.


## Synchronizing the optional wireless keyboard and mouse

The wireless keyboard and mouse are optional components. The mouse and keyboard are synchronized at the factory. If they do not work, remove and replace the batteries. If the mouse and keyboard are still not synchronized, then follow this procedure to manually re-synchronize the pair.


- 1.

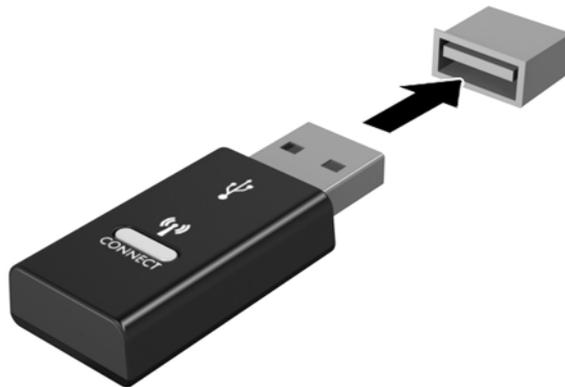

- 2.

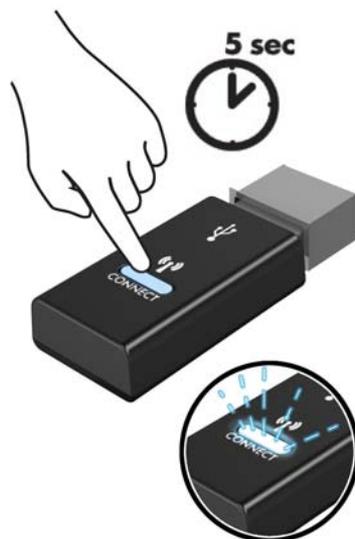

3.

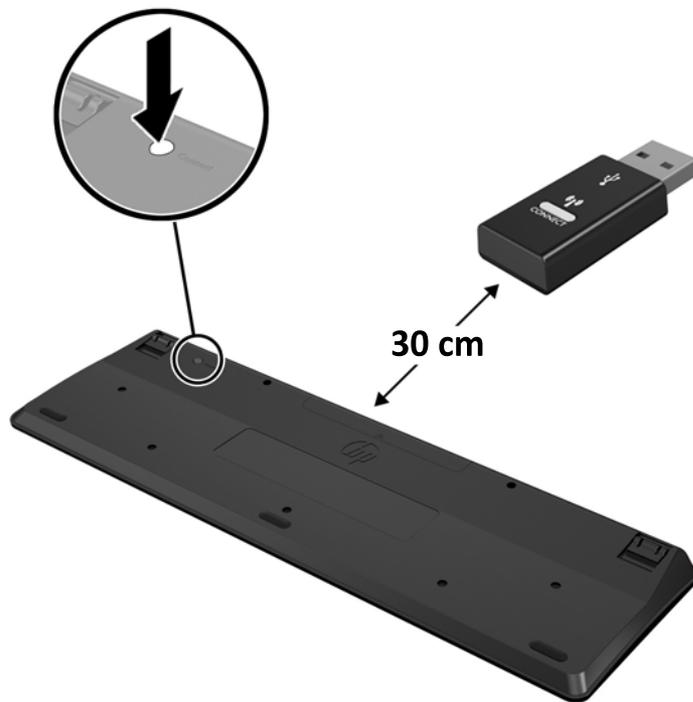

4.



 **NOTE:** If the mouse and keyboard still do not work, then remove and replace the batteries. If the mouse and keyboard are still not synchronized, then synchronize the keyboard and mouse again.

---

## 3 Hardware repair and upgrade

### Warnings and cautions

Before performing upgrades be sure to carefully read all of the applicable instructions, cautions, and warnings in this guide.

---

**⚠ WARNING!** To reduce the risk of personal injury from electrical shock, hot surfaces, or fire:

Disconnect the power cord from the AC outlet before removing the enclosure. Energized parts are inside.

Allow the internal system components to cool before you touch them.

Replace and secure the enclosure before restoring power to the equipment.

Do not connect telecommunications or telephone connectors to the network interface controller (NIC) receptacles.

Do not disable the power cord grounding plug. The grounding plug is an important safety feature.

Plug the power cord in a grounded (earthed) AC outlet that is easily accessible at all times.

For your safety, do not place anything on power cords or cables. Arrange them so that no one may accidentally step on or trip over them. Do not pull on a cord or cable. When unplugging from the AC outlet, grasp the cord by the plug.

To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper workstation setup and provides guidelines for posture and work habits that increase your comfort and decrease your risk of injury. It also provides electrical and mechanical safety information. This guide is located on the web at <http://www.hp.com/ergo>.

**⚠ CAUTION:** Static electricity can damage the electrical components of the computer or optional equipment. Before beginning these procedures, ensure that you are discharged of static electricity by briefly touching a grounded metal object. See [Electrostatic discharge on page 43](#) for more information.

When the computer is plugged into an AC power source, voltage is always applied to the system board. You must disconnect the power cord from the power source before opening the computer to prevent damage to internal components.

---


### Additional information

For more information on removing and replacing hardware components, the Computer Setup utility, and troubleshooting, refer to the *Maintenance and Service Guide* (available in English only) for your computer model at <http://www.hp.com>.

## Removing batteries from the optional wireless keyboard or mouse

 **NOTE:** The wireless keyboard and mouse are optional components.

To remove batteries from the wireless keyboard, remove the battery door on the underside of the keyboard (1) and lift the batteries out of the battery compartment (2).

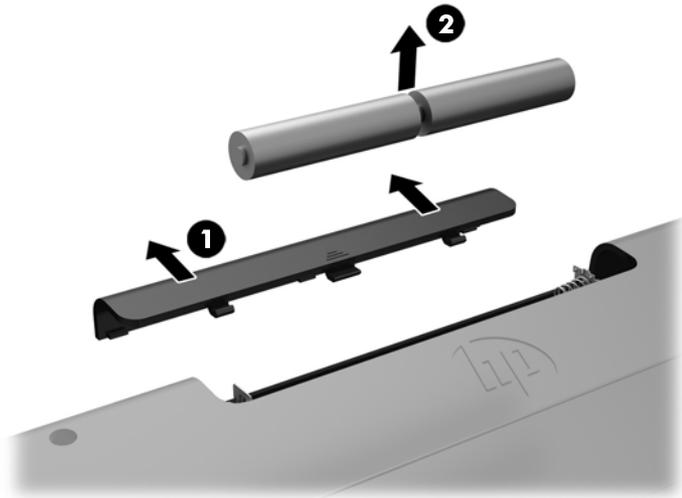

To remove batteries from the wireless mouse, remove the battery door on the underside of the mouse (1) and lift the batteries out of the battery compartment (2).



# Removing and replacing the computer access panel

## Removing the computer access panel

The access panel must be removed to access internal components.

1. Remove all removable media, such as optical discs or USB flash drives, from the computer.
2. Turn off the computer properly through the operating system, and then turn off any external devices.
3. Disconnect the power cord from the AC outlet and disconnect any external devices.

---

**⚠ CAUTION:** You must disconnect the power cord and wait approximately 30 seconds for the power to drain before adding or removing memory modules. Regardless of the power-on state, voltage is always supplied to the memory modules as long as the computer is plugged into an active AC outlet. Adding or removing memory modules while voltage is present may cause irreparable damage to the memory modules or system board.

---

4. Remove/disengage any security devices that prohibit opening the computer.
5. Place the computer face down on a soft flat surface. HP recommends that you set down a blanket, towel, or other soft cloth to protect the bezel and screen surface from scratches or other damage.
6. Remove the rear port cover.  
See [Removing the rear port cover on page 17](#).
7. Disconnect cables connected to the computer.  
See [Disconnecting cables on page 17](#).
8. Remove the stand.  
See [Attaching and removing a stand on page 11](#).
9. Pull up the edges of the access panel and then lift the access panel (2) off the computer.




## Replacing the computer access panel

1. Align the edges of the access panel with the computer. Press in the tabs around all sides of the panel until it is in place.



2. Reinstall the stand.  
See [Attaching and removing a stand on page 11](#).
3. Reconnect all cables to the computer.  
See [Connecting cables on page 16](#).
4. Reinstall the rear port cover.  
See [Installing the rear port cover on page 18](#).
5. Relock any security devices that were disengaged when the access panel was removed.
6. Place the computer in the upright position.
7. Plug the power cord into a AC outlet.

## Locating internal components

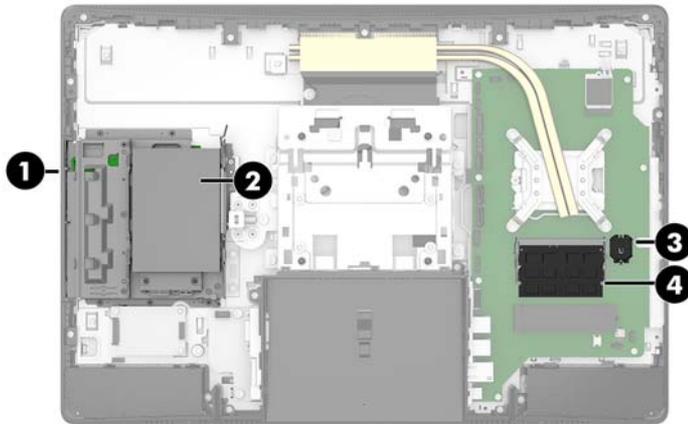

Component	Component
1	Optical disc drive
2	Hard drive
3	Battery
4	Memory modules

## Removing and installing memory

The memory slots on the system board can be populated with up to two industry-standard small outline dual inline memory modules (SODIMMs). These memory slots are populated with at least one preinstalled memory module. A metal shield protects the memory modules.

### Memory module specifications

For proper system operation, the memory modules must meet the following qualifications:

Component	Specification
<b>Memory modules</b>	1.2 volt DDR4-SDRAM memory modules
<b>Compliance</b>	Unbuffered non-ECC PC4-17000 DDR4-2400 MHz-compliant
<b>Pins</b>	Industry-standard 260 pins containing the mandatory Joint Electronic Device Engineering Council (JEDEC) specification
<b>Support</b>	Support CAS latency 15 DDR4 2400 MHz (15-15-15 timing)
<b>Slots</b>	2
<b>Maximum Memory</b>	16 GB per memory slot, 32 GB total
<b>Supported</b>	1 Gbit, 2 Gbit, and 4 Gbit non-ECC memory technologies single-sided and double-sided SODIMMs
<b>Note</b>	The system will not operate properly if you install unsupported SODIMM memory. SODIMMs constructed with x8 and x16 DDR devices are supported; memory modules constructed with x4 SDRAM are not supported.

HP offers upgrade memory for this computer and advises that the consumer purchase it to avoid compatibility issues with unsupported third-party memory.

## Populating memory module slots

The system will automatically operate in single channel mode, dual channel mode, or flex mode, depending on how the memory modules are installed. Refer to the following table to identify the memory module channel locations.

Location	System board label	Channel
Lower Socket	SODIMM1	Channel B
Upper Socket	SODIMM3	Channel A

The system will automatically operate in single channel mode, dual channel mode, or flex mode, depending on how the memory modules are installed.

- The system will operate in single channel mode if the memory module slots are populated in one channel only.
- The system will operate in a higher-performing dual channel mode if the memory capacity of the memory module in Channel A is equal to the memory capacity of the memory module in Channel B.
- The system will operate in flex mode if the memory capacity of the memory module in Channel A is not equal to the memory capacity of the memory module in Channel B. In flex mode, the channel populated with the least amount of memory describes the total amount of memory assigned to dual channel and the remainder is assigned to single channel. If one channel will have more memory than the other, the larger amount should be assigned to channel A.
- In any mode, the maximum operational speed is determined by the slowest memory module in the system.

## Installing memory modules

There are two memory slots on the system board. To remove or install memory modules:

1. Remove the access panel.


For instructions, see [Removing the computer access panel on page 28](#).

2. Remove the electromagnetic interference (EMI) shield from the system board.

- If your computer model is a ProOne 600, lift the EMI shield off the system board.



- If your computer model is a ProOne 400, use a flat blade or Torx screwdriver to remove the screws that secure the EMI shield and lift the shield off the computer.

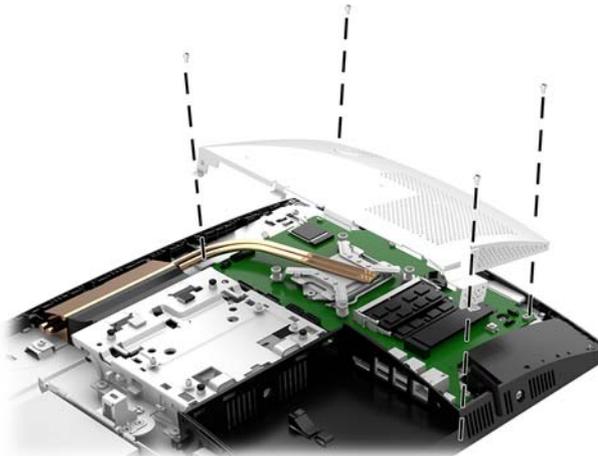

3. To locate the memory modules on the system board, see [Locating internal components on page 30](#).

4. To remove a memory module, press outward on the two latches on each side of the memory module (1), then pull the memory module out of the slot (2).




5. Slide the new memory module into the slot at approximately a 30° angle (1), then press the memory module down (2) so that the latches lock it in place.




 **NOTE:** A memory module can be installed in only one way. Match the notch on the module with the tab on the memory slot.

6. Reinstall the EMI shield onto the system board.
  - If your computer model is a ProOne 600, place the EMI shield onto the chassis and press it into place.

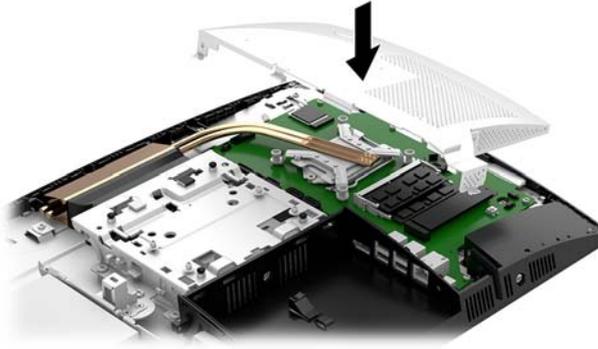

- If your computer model is a ProOne 400, place the EMI shield onto the chassis and use a flat blade or Torx screwdriver to fasten the screws to secure the EMI shield.

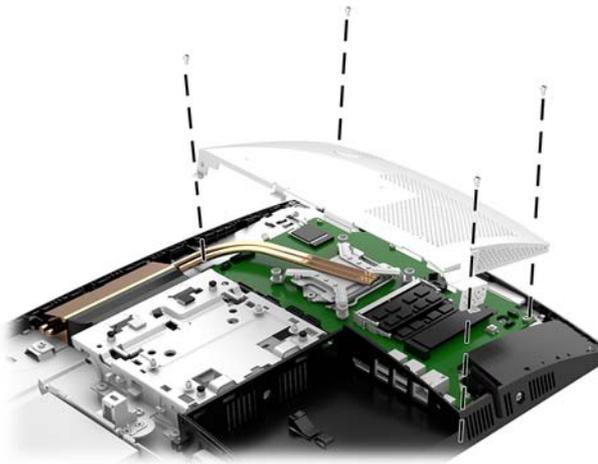

7. Install the access panel.

For instructions, see [Replacing the computer access panel on page 29](#).

8. Turn on the computer. The computer automatically recognizes the additional memory when you turn on the computer.

## Replacing the RTC Battery

The battery that comes with the computer provides power to the real-time clock. When replacing the battery, use a battery equivalent to the battery originally installed in the computer. The computer comes with a 3-volt lithium coin cell battery.

**⚠ WARNING!** The computer contains an internal lithium manganese dioxide battery. There is a risk of fire and burns if the battery is not handled properly. To reduce the risk of personal injury:

Do not attempt to recharge the battery.

Do not expose to temperatures higher than 60°C (140°F).

Do not disassemble, crush, puncture, short external contacts, or dispose of in fire or water.

Replace the battery only with the HP spare designated for this product.

**⚠ CAUTION:** Before replacing the battery, it is important to back up the computer CMOS settings. When the battery is removed or replaced, the CMOS settings will be cleared.

Static electricity can damage the electronic components of the computer or optional equipment. Before beginning these procedures, ensure that you are discharged of static electricity by briefly touching a grounded metal object.

**📝 NOTE:** The lifetime of the lithium battery can be extended by plugging the computer into a live AC outlet. The lithium battery is only used when the computer is NOT connected to AC power.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, go to <http://www.hp.com/recycle>.


To locate the battery on the system board, see [Locating internal components on page 30](#).

**1.** Remove the access panel.


For instructions, see [Removing the computer access panel on page 28](#).

**2.** Remove the electromagnetic interference (EMI) shield from the system board.


- If your computer model is a ProOne 600, lift the EMI shield off the system board.

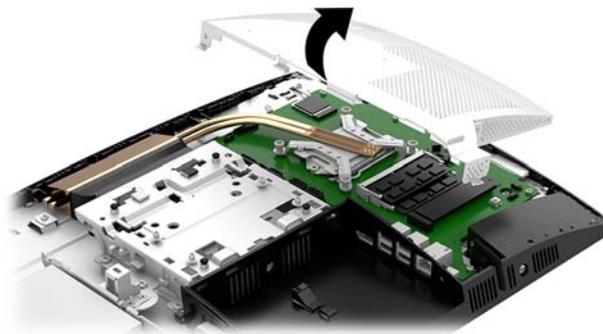


- If your computer model is a ProOne 400, use a flat blade or Torx screwdriver to remove the screws that secure the EMI shield and lift the shield off the computer.

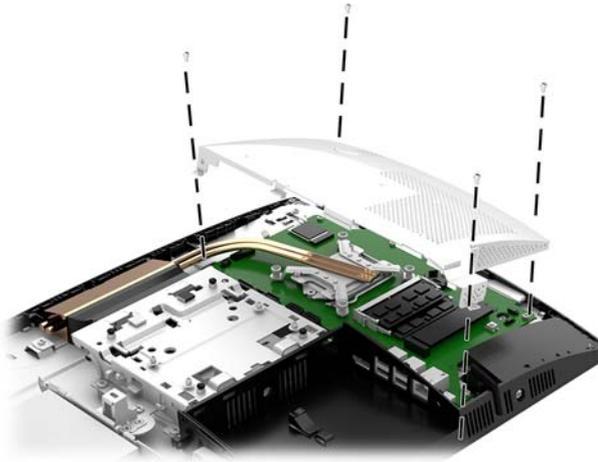


3. To release the battery from its holder, squeeze the metal clamp that extends above one edge of the battery. When the battery pops up, lift it out (1).
4. To insert the new battery, slide one edge of the replacement battery under the holder's lip with the positive side up. Push the other edge down until the clamp snaps over the other edge of the battery (2).

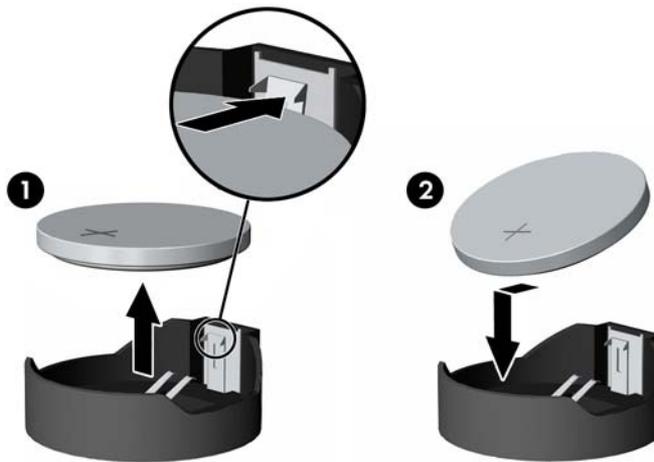

5. Reinstall the EMI shield onto the system board.
  - If your computer model is a ProOne 600, place the EMI shield onto the chassis and press it into place.

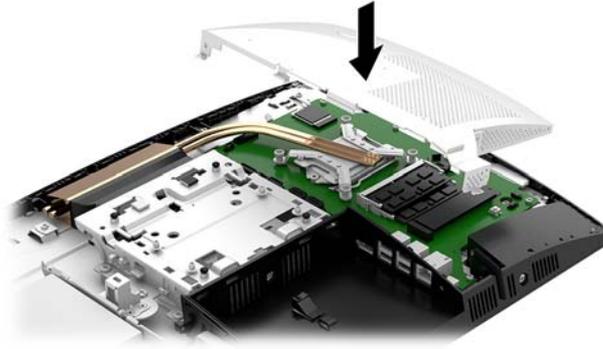

- If your computer model is a ProOne 400, place the EMI shield onto the chassis and use a flat blade or Torx screwdriver to fasten the screws to secure the EMI shield.

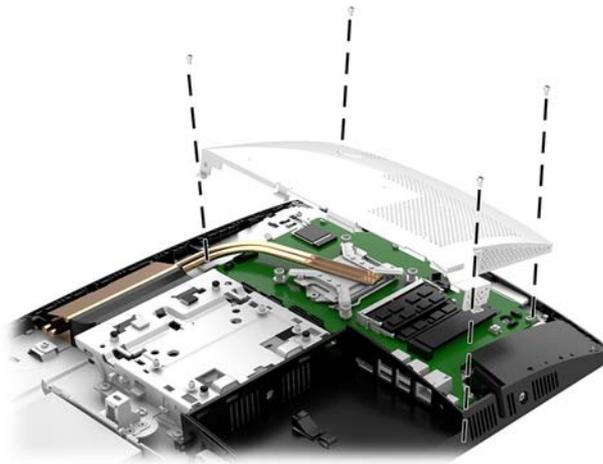

6. Install the access panel.  
For instructions, see [Replacing the computer access panel on page 29](#).
7. Turn on the computer.
8. Reset the date and time, your passwords, and any special system setups using Computer Setup.


# Replacing drives

## Replacing a hard drive


The 2.5 inch primary hard drive is installed on the left side of the computer on top of the optical disc drive (ODD). To locate the hard drive on the system board, see [Locating internal components on page 30](#).

## Removing a hard drive

1. Remove the access panel.  
For instructions, see [Removing the computer access panel on page 28](#).
2. Pull the hard drive latch away from the hard drive (1) to release the drive.
3. Slide the hard drive toward the edge of the computer and lift the hard drive out of the drive cage (2).
4. Disconnect the power and data cables from the hard drive (3).

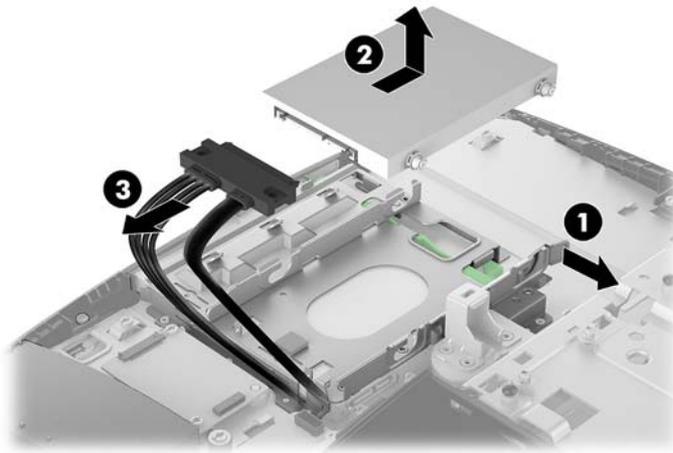


5. Remove the four mounting screws from the 2.5 inch hard drive. Be sure to keep the screws together with the blue rubber grommets to use to install a replacement drive.

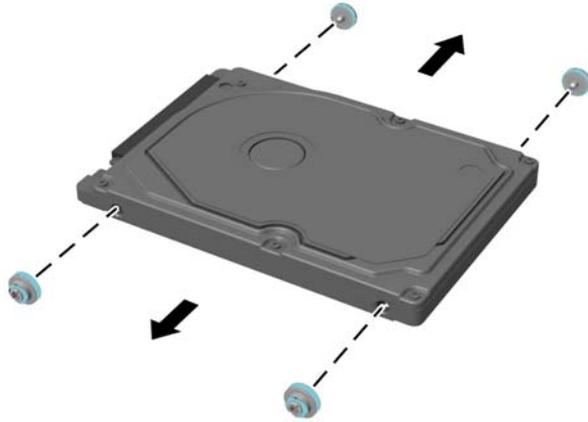

For instructions on installing a hard drive, see [Installing a 2.5 inch hard disk drive on page 40](#).


## Installing a 2.5 inch hard disk drive

1. Fasten four mounting screws with grommets onto the new 2.5 inch hard drive.

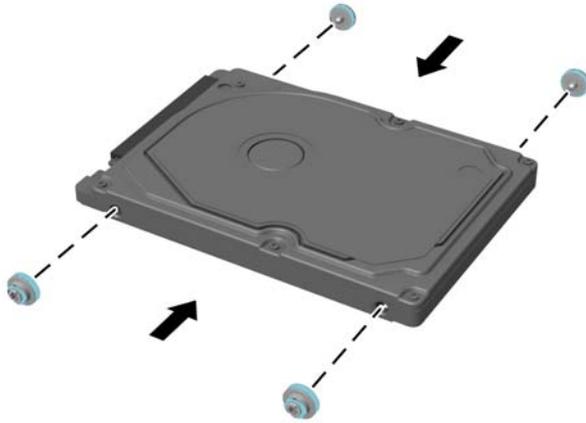

2. Position the hard drive above the drive cage with the connectors facing the power and data cables.
3. Connect the power and data cables to the hard drive (1).
4. Place the hard drive into the drive cage and slide it firmly away from the edge of the computer (2) until the hard drive snaps into place.

Be sure that the hard drive latch has moved back into place to cover the grommet on the side of the hard drive.

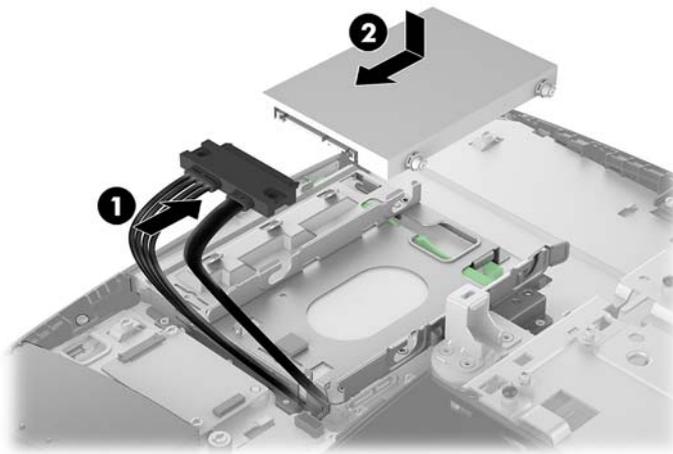

5. Install the access panel.  
For instructions, see [Replacing the computer access panel on page 29](#).

## Replacing the optical disc drive

The optical disc drive is located under the hard drive. To locate the optical disc drive on the system board, see [Locating internal components on page 30](#).


1. Remove the access panel.

For instructions, see [Removing the computer access panel on page 28](#).

2. Remove the hard drive.

For instructions see [Removing a hard drive on page 38](#).

3. Push and hold the green tab (1) while pushing in the green latch (2) at the back of the optical disc drive enclosure and slide the drive out of the chassis (3).

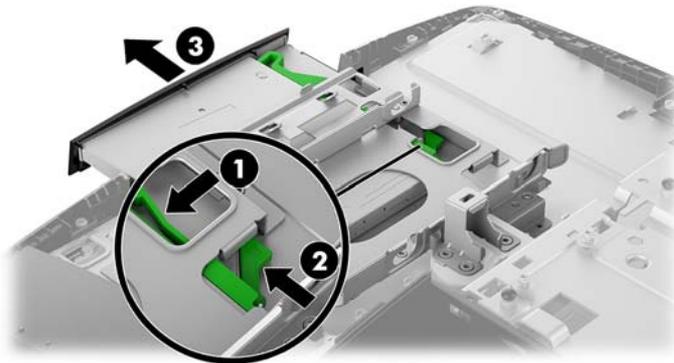

4. Pull the green latch off the optical disc drive.

Keep this latch to install on the new optical disc drive.

5. Align the three pins on the latch with the holes in the new optical disc drive and press the latch firmly onto the new drive.




 **NOTE:** You must reuse the latch removed from the old optical disc drive.

6. Align the new optical disc drive with the opening in the side of the computer. Push the drive in firmly until it snaps into place.



**NOTE:** The optical disc drive can be installed in only one way.

---

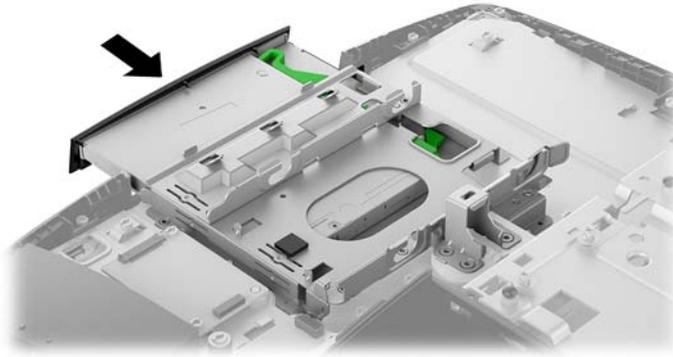

7. Install the hard drive.  
For instructions, see [Installing a 2.5 inch hard disk drive on page 40](#)
8. Install the access panel.  
For instructions, see [Replacing the computer access panel on page 29](#).

---

# A Electrostatic discharge

A discharge of static electricity from a finger or other conductor may damage system boards or other static-sensitive devices. This type of damage may reduce the life expectancy of the device.

## Preventing electrostatic damage

To prevent electrostatic damage, observe the following precautions:

- Avoid hand contact by transporting and storing products in static-safe containers.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free workstations.
- Place parts on a grounded surface before removing them from their containers.
- Avoid touching pins, leads, or circuitry.
- Always be properly grounded when touching a static-sensitive component or assembly.

## Grounding methods

Use one or more of the following methods when handling or installing electrostatic-sensitive parts:

- Use a wrist strap connected by a ground cord to a grounded workstation or computer chassis. Wrist straps are flexible straps with a minimum of 1 megohm +/- 10 percent resistance in the ground cords. To provide proper ground, wear the strap snug against the skin.
- Use heelstraps, toestraps, or bootstraps at standing workstations. Wear the straps on both feet when standing on conductive floors or dissipating floor mats.
- Use conductive field service tools.
- Use a portable field service kit with a folding static-dissipating work mat.

If you do not have any of the suggested equipment for proper grounding, contact an HP authorized dealer, reseller, or service provider.



**NOTE:** For more information on static electricity, contact an HP authorized dealer, reseller, or service provider.

---

---

# B Computer operating guidelines, routine care, and shipping preparation

## Computer operating guidelines and routine care

Follow these guidelines to properly set up and care for the computer and monitor:

- Keep the computer away from excessive moisture, direct sunlight, and extremes of heat and cold.
- Operate the computer on a sturdy, level surface. Leave a 10.2 cm (4 in) clearance on all vented sides of the computer and above the monitor to permit the required airflow.
- Never restrict the airflow into the computer by blocking any vents or air intakes. Do not place the keyboard, with the keyboard feet down, directly against the front of the desktop unit as this also restricts airflow.
- Never operate the computer with any of the access panels or any of the expansion card slot covers removed.
- Do not stack computers or place computers so near each other that they are subject to each other's recirculated or preheated air.
- If the computer is to be operated within a separate enclosure, intake and exhaust ventilation must be provided on the enclosure, and the same operating guidelines listed above will still apply.
- Keep liquids away from the computer and keyboard.
- Never cover the ventilation slots with any type of material.
- Install or enable power management functions of the operating system or other software, including sleep states.
- Turn off the computer before you do any of the following:
  - Wipe the exterior of the computer with a soft, damp cloth as needed. Using cleaning products may discolor or damage the finish.
  - Wipe the screen with a soft, clean antistatic cloth. For more difficult cleaning situations, use a 50/50 mix of water and Isopropyl alcohol. Spray the cleaner onto a cloth and use the damp cloth to gently wipe the screen surface. Never spray the cleaner directly on the screen surface. It may run behind the bezel and damage the electronics.
  - Occasionally clean the air vents on all vented sides of the computer. Lint, dust, and other foreign matter can block the vents and limit the airflow.
- Do not use cleaners that contain any petroleum based materials such as benzene, thinner, or any volatile substance to clean the screen or cabinet. These chemicals may damage the computer.

## Optical disc drive precautions

Be sure to observe the following guidelines while operating or cleaning the optical disc drive.

- Do not move the drive during operation. This may cause it to malfunction during reading.
- Avoid exposing the drive to sudden changes in temperature, as condensation may form inside the unit. If the temperature suddenly changes while the drive is on, wait at least one hour before you turn off the power. If you operate the unit immediately, it may malfunction while reading.
- Avoid placing the drive in a location that is subject to high humidity, extreme temperatures, mechanical vibration, or direct sunlight.

---

 **CAUTION:** If any object or liquid falls into the drive, immediately unplug the computer and have it checked by an authorized HP service provider.

---

## Shipping preparation

Follow these suggestions when preparing to ship the computer:

1. Back up the hard drive files to an external storage device. Be sure that the backup media is not exposed to electrical or magnetic impulses while stored or in transit.



---

**NOTE:** The hard drive locks automatically when the system power is turned off.

---

2. Remove and store all removable media.
3. Turn off the computer and external devices.
4. Disconnect the power cord from the AC outlet, and then from the computer.
5. Disconnect the system components and external devices from their power sources, and then from the computer.



---

**NOTE:** Ensure that all boards are seated properly and secured in the board slots before shipping the computer.

---

6. Pack the system components and external devices in their original packing boxes or similar packaging with sufficient packing material to protect them.

---

## C Accessibility

HP designs, produces, and markets products and services that can be used by everyone, including people with disabilities, either on a stand-alone basis or with appropriate assistive devices.

### Supported assistive technologies

HP products support a wide variety of operating system assistive technologies and can be configured to work with additional assistive technologies. Use the Search feature on your device to locate more information about assistive features.



**NOTE:** For additional information about a particular assistive technology product, contact customer support for that product.

---

### Contacting support

We are constantly refining the accessibility of our products and services and welcome feedback from users. If you have an issue with a product or would like to tell us about accessibility features that have helped you, please contact us at (888) 259-5707, Monday through Friday, 6 a.m. to 9 p.m. Mountain Time. If you are deaf or hard-of-hearing and use TRS/VRS/WebCapTel, contact us if you require technical support or have accessibility questions by calling (877) 656-7058, Monday through Friday, 6 a.m. to 9 p.m. Mountain Time.

# Index

## A

- access panel
  - removing 28
  - removing and replacing 28
  - replacing 29
- accessibility 46
- additional information 26
- adjustable height stand 13
  - adjustment 20
  - attaching 13
  - removing 14

## B

- battery replacement 35

## C

- cables 16
  - connecting 16
  - disconnecting 17
- components
  - internal 30
  - ProOne 400 5
  - ProOne 400 front 5
  - ProOne 400 side 6
  - ProOne 600 2
  - ProOne 600 front 2
  - ProOne 600 rear 4
  - ProOne 600 side 3
  - rear 7
- computer operating guidelines 44
- connecting
  - cables 16
  - display 16
  - power cord 16

## D

- disconnecting
  - cables 17
  - power cord 17
- display connection 16
- DisplayPort video adapter,
  - connecting 16
- drive
  - 2.5 inch, installing 40
  - 2.5 inch, removing 38

- optical disc, replacing 41
- types 38

## E

- easel stand 11
  - adjustment 19
  - attaching 11
  - removing 12
- electrostatic discharge, preventing damage 43

## F

- features
  - keyboard 8
  - overview 1
- front components
  - ProOne 400 5
  - ProOne 600 2

## G

- grounding methods 43

## H

- hard disk drive
  - 2.5 inch, installing 40
- hard drive
  - 2.5 inch 38
  - 2.5 inch, removing 38
  - replacing 38
  - self-encrypting 38
  - solid state 38
  - types 38

## I

- installation guidelines 26
- installing
  - 2.5 inch hard disk drive 40
  - battery 35
  - display 16
  - memory 32
  - optical disc drive 41
- internal components 30

## K

- keyboard
  - features 8
  - removing batteries 27
  - synchronizing wireless 24

## L

- labels
  - Certificate of Authenticity 9
  - location 9
  - Microsoft Certificate of Authenticity 9
  - serial number 9
  - service 9
- lock
  - rear port cover 17
  - security cable 21

## M

- memory 30
  - installing 32
  - maximum 30
  - removing 32
  - slots 30
  - SODIMMs specifications 30
  - specifications 30
- Microsoft Certificate of Authenticity label 9
- mounting the computer 15
- mouse
  - removing batteries 27
  - synchronizing wireless 24

## O

- optical disc drive
  - precautions 45
  - replacing 41

## P

- port cover 17
  - installing 18
  - removing 17
- power
  - connecting 22
  - disconnecting 17, 22

- power cord
  - connecting 16
  - disconnecting 17
- product name and number, computer 9
- ProOne 400
  - components 5
- ProOne 600
  - components 2

## R

- rear components 7
  - ProOne 600 4
- rear port cover 17
  - installing 18, 0
  - removing 17
- removing
  - 2.5 inch hard drive 38
  - optical disc drive 41
- removing battery 35
- rotation 20

## S

- security
  - rear port cover 17
  - rear port cover, installing 18
  - rear port cover, removing 17
- security cable 21
- serial number 9
- setup, order of 10
- shipping preparation 45
- side components
  - ProOne 400 6
  - ProOne 600 3
- SODIMM
  - identification 31
  - location 31
  - specifications 30
- specifications, memory 30
- stands
  - adjustable height, attaching 13
  - adjustable height, removing 14
  - attaching and removing 11
  - easel, attaching 11
  - easel, removing 12
  - positioning 19
- synchronizing wireless keyboard and mouse 24
- system memory 30

## V

- ventilation guidelines 44
- VESA mounting holes 15

## W

- warnings and cautions 26
- webcam 23
  - operation 23
- Windows Hello 24
- Windows Hello 24